TOC-625 MICRO SERIES GAS DETECTION SYSTEM





TOC-625 is a multi-channel detector controller in an easily installed and implemented small format package. The system can be used with the Tocsin Addressable range of detectors or I/O modules listed in the auto setup table.

625 Micro has a unique Auto Setup Function.

Setup Wizard at Startup

TOC-625 Automatically Finds Connected Devices
Detected Devices are Automatically Installed
Alarm Levels and Outputs are Automatically Set

The control panel should be located outside the area where the detectors are located so that it is not necessary to enter to the area with a gas alarm to reset or check the controller.

For detector locations refer to IGD document BS023 Siting Gas Detectors. This is available from the downloads area of our website.

Detectors are supplied pre-calibrated. If it is required to check or demonstrate operation, test gas kits are available from IGD

Auto Setup Table 1

Note Alarms Levels and Types Are Fixed and Cannot be Adjusted

Gas Outputs	Range	Туре	Alarm 1 / Relay 1	Alarm 2 / Relay 2
Flammables	0-100% LEL	Rising - Latching	10% LEL	20% LEL
Carbon Monoxide	0-100ppm	Rising - Latching	20ppm	55ppm
Carbon Dioxide	0-5000ppm	Rising - Latching	3500ppm	4500ppm
Carbon Dioxide	0-5%	Rising - Latching	0.5%	1.5%
Chlorine	0-5ppm	Rising - Latching	0.2ppm	0.5ppm
Oxygen	0-25%	Falling - Latching	19.5%	18.5%
Hydrogen Sulphide	0-50ppm	Rising - Latching	5ppm	10ppm

Relay 1 and Relay 2 on the TOC-625-Micro are set to be normally energised, de-energising on alarm or power failure.

The TOC-625-Micro can FIND up to 10 devices. These can be any mix of gas detectors and up to 2 output nodes

The TOC-625-Micro can FIND up to 4 addressable relays on 2 output nodes. Relay nodes supplied with TOC-625-Micro need to be addressed as follows and will operate according to the following table.

Relays Active on	Output Node 1		Output Node 2	
First Alarm	Relay 1	Relay 2	Relay 1	Relay 2
1 Hot/ Walli		Mutable	-	Mutable
Node Relay Address	4201	4202	4203	4204

Note that mutable relays re-energise on second alarm.

Triton House Crosby Street Stockport SK2 6SH England

Tel: +44 (0)161 483 1415 Fax: +44 (0) 161 484 2345 les@internationalgasdetectors.com

Email: sales@internationalgasdetectors.com Website: www.internationalgasdetectors.com



REF: T625 M v4

Electrical Details Figure 1 24V DC Operation


Electrical Load: TOC-625 Micro Controller in Alarm State 0.3A @ 24 V DC Electrical Power: 18-28V DC TOC-30 Series Addressable Gas Detector 0.1A @ 24 V DC

TOC-30 Series Relay Node Activated 0.2A @ 24 V DC

Power Requirements For 8 Detectors and 2 Nodes From Above Table = 1.5A

If you are using a floating output DC supply that does not have a grounded output then with the case open high voltages could be present. Power down equipment before opening the housing and ensure installation is by a competent person.

Rear View Front View Cover Open TOC-625 Micro

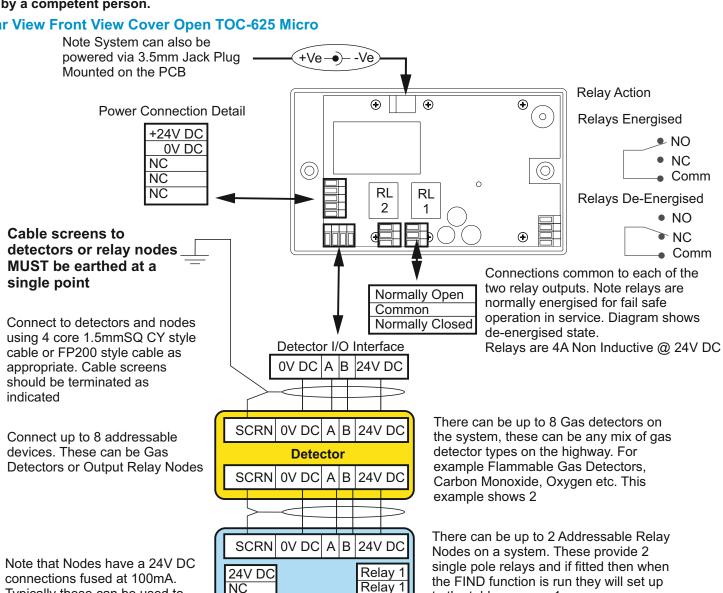

I/O Node

SCRN 0V DC A B 24V DC

SCRN 0V DC A B 24V DC

Detector SCRN 0V DC A B 24V DC

Relay 2

Relay 2

NC

0V DC

Typically these can be used to supply power for LED type beacon sounders.

the FIND function is run they will set up to the table on page 1

NOTE

Detectors and Nodes MUST have unique addresses. These will be indicated on the cover on the detector or node. Detectors or Nodes with duplicate addresses will not function correctly



Front View

172mm 158mm 158mm 158mm Temp Rating 6 Entries 220.5mm 76mm 76mm 75mm -5 to To 55 Deg C Humidity Rating 0-95% RH Non-Condensing

Sealing

Detector Order Codes

Gas	Standard Range	Order Code	Typical Cell Life
Flammable Gases	0-100% LEL	TOC-30P-PHC	>3 Years
Carbon Monoxide	0-100ppm	TOC-30P-CO	>5 Years
Oxygen	0-30% Vol	TOC-30P-O2	>5 Years
Chlorine	0-20ppm	TOC-30P-CL2	>2 Years
Carbon Dioxide	0-5%	TOC-30P-CO2	>5 Years
Carbon Dioxide	0-5000ppm	TOC-30P-LCO2	>5 Years
Hydrogen Sulphide	0-50ppm	TOC-30A-H2S	>3 Years

Accessory Order Codes


IP54

Side View

,				
Gas Collector Cone*	5210101			
Remote Gassing Kit*	5110150			
Cal Gas Adaptor	5925701			
Splashguard	TOC-30-GD			
Beacon Sounder	5083701			
With Signage				
5A PSU With Battery	TOC-PSU-B			
Backup 110/230V AC				
2.5A 24V DC PSU	TOC-PSU			
110/230V AC				

*Collector Cones and remote gassing kits also require the splash guard to be fitted


Start up

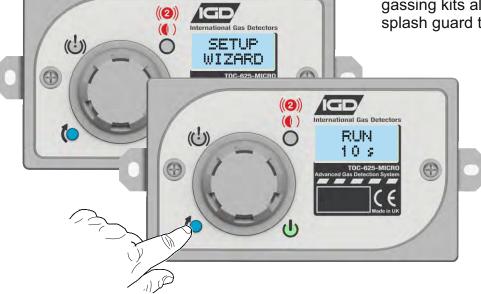

After the start up cycle the Setup Wizard is displayed and RUN option will be available for 10 seconds. Press the button during this period and the TOC-625 Micro will search for connected detectors and relay nodes. Based on the devices found the controller will set itself up based on table 1. No operator intervention is required. Gas channels will be automatically configured based on the devices found. Need to add or remove a detector or node? Just make the physical changes and select the RUN option again on power up

User Actions....Day to Day Operation

Once fully installed the TOC-625 controller will continuously monitor connected gas detectors and sensors and compare current values with any set alarm thresholds. The display will cycle to display each channel in turn.

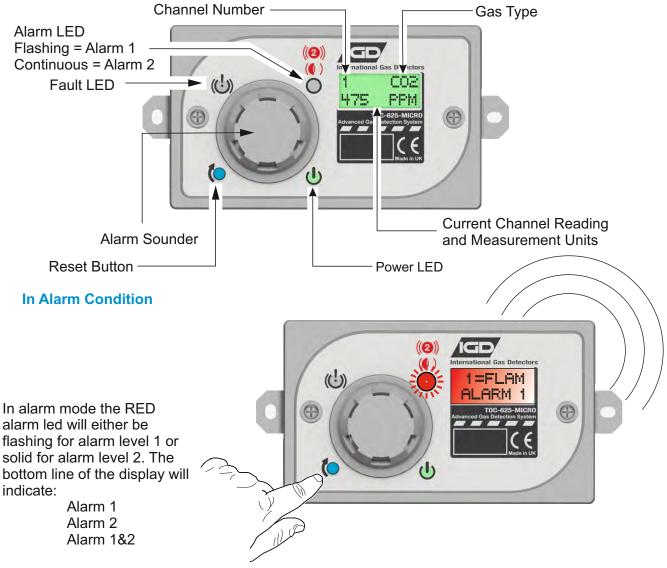

The back light will flash red and the display will indicate which alarm level and which channel is in alarm. The sounder will also activate. Pressing the button will silence the sounder and mute the relay nodes if connected as indicated in table 1. If the gas is still breaching the alarm threshold it will not be possible to reset the alarm

In Fault Condition

In FAULT mode the Yellow fault led will be on. The bottom line of the display will indicate as follows:

FLT COM communication error to sensors

FLT SEN Sensor Error

FLT OVR Sensor Over Range FLT UND Sensor Under Range

IGD

Triton House Crosby Street Stockport SK2 6SH England

Tel: +44 (0)161 483 1415 Fax: +44 (0) 161 484 2345 Email: sales@internationalgasdetectors.com Website: www.internationalgasdetectors.com



(2)

(1)

1=FLAM